

How to replace a storage container

The storage container is the largest piece which has the tap fitted to the bottom.

To replace a storage container we will need the diameter measurement. Taken from the **inside** of the ceramic walls, measure from the inside of the top wall to the other.

As all of our product is handmade the top of the container is not usually perfectly round (as in moulded pottery).

Take the diameter measurement from more than one spot and give us the **smallest** diameter measurement.

(eg.pic1 may have a diameter of 19.5cm while pic2 has a diameter of only 19cm)

If the storage container is broken in pieces and you are unable to measure the old one we will need the diameter measurement of the lid. See how to replace a lid

Also we will need the glaze colour or design. See product range

